
## **Ring Spun V-Neck Ladies' Tee**

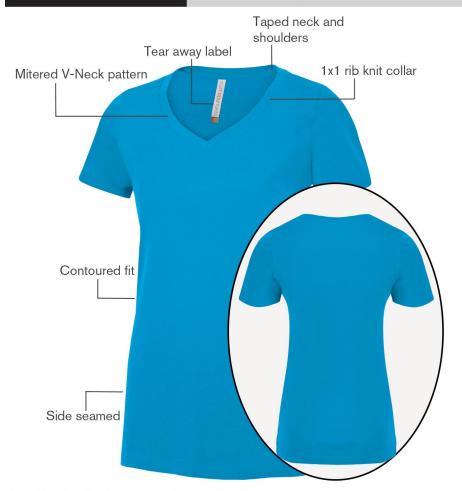



## ATC8001L

## **Product Features:**

- 6.8-oz, 100% combed and ring spun cotton
- Ultra soft 30 single jersey
- Double needle cover stitch at sleeve and bottom hem

Ladies' sizes: XS-4XL

## Icons/Fabric Features:



## **Available Colours and PMS Colours**



7761C 553C

7533C & Black 6C

706C, 211C & 214C

# ATC8001L - ATC™ / EUROSPUN® Ring Spun V-Neck Ladies' Tee

GARMENT MEASUREMENTS										
Size	xs	S	М	L	XL	2XL	3XL	4XL		
Chest - Half Measure	15 1/2"	16 1/2"	17 1/2"	19"	20 1/2"	22"	24"	26"		
Chest - Full Measure	31"	33"	35"	38"	41"	44"	48"	52"		
Body Length from HPS	25 3/4"	26 1/4"	26 3/4"	27 3/4"	28 3/4"	29 3/4"	30 1/4"	30 3/4"		
Sleeve Length-CB	13 3/4"	14"	14 1/4"	14 3/4"	15 1/4"	15 3/4"	16"	16 1/4"		

Finished measurements in inches. Refer to "How to Measure" guide for detailed information on measurement instructions.

LADIES' General Sizing Guide										
Size	XS	S	M	L	XL	2XL	3XL	4XL		
Numeric Size	2	4-6	8-10	12-14	16	18-20	22	24		
Bust	32"-34"	35"-36"	37"-38"	39"-41"	42"-44"	45"-47"	48"-51"	52"-55"		
Waist	24"-25"	26"-27"	28"-30"	30"-32"	33"-35"	36"-38"	40"-42"	42"-44"		
Hip	33"-35"	35"-37"	37"-39"	39"-41"	42"-44"	45"-47"	48"-50"	50"-52"		
Sleeve Length-CB	30"-30 1/2"	30 1/2"-31"	31 1/2"-32"	32 1/2"-33"	33 1/2"-34"	34"-34 1/2"	34 1/2"-35"	34 1/2"-35"		



### **DECORATION RECOMMENDATIONS FOR PRINTED FABRICS:**

Due to the nature of printed fabrics, special care must be taken throughout the decoration process. Here are some tips to effectively decorate printed fabrics:

### **Screen Printing Tips:**

- Garment dyes may bleed through screen printed inks, especially when printing on top of print that contains red dye. Sublimation will be most noticeable when using white or light colour inks and may take 24-48 hours to occur.
- Use base blocker ink first (grey works best)
- Using low bleed poly ink is recommended
- Use coarse mesh
- Do not exceed recommended dryer temperature
- Check with your ink supplier for other tips

## **Heat Transfer Tips:**

- Use of vinyl heat transfer may help minimize sublimation
- Use cover sheet/flexible application sheet to shield upper platen from sublimation dyes
- Do not exceed recommended temperature
- Check with your heat transfer supplier for other tips

A test sample run is recommended, especially if you have a large order or if your decorator does not specialize in printed fabrics.